
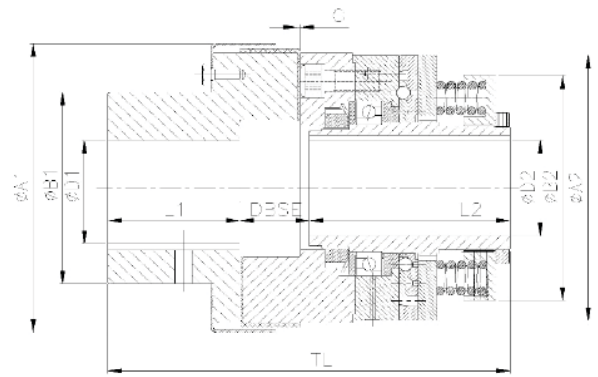


# Rozpínacie spojky RFA

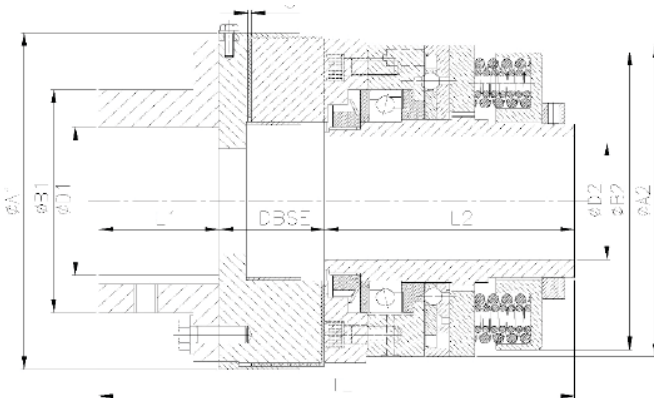

**TECHNICAL DATA FOR RATHI FUSE WITH JAW FLEX (RFA H TYPE)**

Coupling Size	Coupling Torque, Nm			Max. Speed RPM	Max. Bore		ØA1	ØB1	ØA2	ØB2	ØF	G (Gap)	DBSE	L1	L2	TL	Max. Misalignment		
	Nominal torque	Min Trip Torque	Max Trip Torque		ØD1	ØD2											Axial (mm)	Radial (mm)	Angular (Deg)
RFA-H-225	265	20	226	3600	55	28	142	111	130	106	-	3	30	64	108	202	1.5	0.4	1
RFA-H-280	782	60	678	3600	80	60	208	140	172	152	-	3	40.5	80	128	248	1.5	0.4	1
RFA-H-295	1279	75	1130	2000	95	75	253	162	219	183	-	3	57	95	140	282	1.5	0.4	1
RFA-H-300	3047	225	2540	2000	120	90	272	180	250	212	-	3	61	115	175	351	1.5	0.4	1
RFA-H-367	9931	1100	5650	1800	140	110	317	210	309	278	-	3	92	105	218	415	1.5	0.4	1
RFA-H-407	14190	1500	11300	1600	165	130	349	248	346	315	-	3	99.5	120	245	464.5	1.5	0.4	1
RFA-H-509	22784	3500	24860	1500	190	150	412	305	434	386	-	6	103	140	300	543	3	0.4	1